

Enable the Timer Unit

UT700 LEON 3FT

Application Note
Cobham.com/HiRel

September 29, 2017

The most important thing we build is trust

Table 1: Cross Reference of Applicable Products

PRODUCT NAME	MANUFACTURER PART NUMBER	SMD #	DEVICE TYPE	INTERNAL PIC NUMBER
UT700 LEON	UT700	5962-13238	Timer Unit	WQ03

1.0 Overview

The Timer Unit has a long history of being a part of the computer system's world. Although the Timer Unit operations are limited to counting, comparing and triggering, its role is invaluable.

In an Operating System, the Timer Unit allows the scheduler to deterministically check for the next task ready-to-run, while in a TCP/IP stack, the Timer Unit acts as a heartbeat to the communication stack to process incoming data at a constant time interval. Besides these two examples, we can use the timer unit to generate Pulse Width Modulation (PWM) to control motors, produce simple Digital-to-Analog Conversion (DAC) output, etc.

The UT700 LEON 3FT SPARC™ Processor provides one Timer Unit consisting of four 32-bit timers. Each timer can operate independently, or in chain mode. In chain mode, we can chain up to four timers to provide a higher count value.

In this Application Note, we explore the Timer Unit features and how to program it.

Note: The description in this application note describes how to directly use the memory mapped interface of a specific hardware peripheral. If you are using an operating system such as RTEMS, Linux, and VxWorks or an environment such as BCC then it is recommended to use the infrastructure provided by those environments instead of accessing the peripheral directly as described in this application note.

2.0 Application Note Layout

This application note (AN) starts by providing a brief description of the Timer Unit memory map, the associated registers, and the timers. The description of the Timer Unit falls under the Timer Unit Hardware sections.

After the Timer Unit Hardware sections, this AN provides a high-level flow diagram to depict the correct sequential steps to initialize the Timer Unit. We describe each block in the order as shown in the flow diagram. The description of the flow diagram falls under the Timer Unit Initialization sections.

Finally, we apply this knowledge using C programming code to enable the UT700 Timer Unit to show its capabilities. The C code programming examples fall under the Timer Unit Programming sections.

These subsections are described in detail below:

- Timer Unit Hardware
- Timer Unit Initialization
- Timer Unit Programming

3.0 Timer Unit Hardware

The Timer Unit is mapped to the memory region from 0x8000_0300 to 0x8000_0348. It has 15 registers; two registers for the Prescaler, one configuration register and four set of three registers for each timer. For more information about each register, refer to **Chapter 7** of the UT700 Functional Manual.

In the following subsections, we explore the details of the Timer Unit's prescaler and timers.

3.1 Timer Unit 12-bit Prescaler

The system clock drives the Prescaler to provide the maximum count resolution to the 32-bit timers. The Prescaler includes a hardwired self-reloading logic when the Scalar Value Register (**TIMSVR**) value underflows, it automatically reloads the user preset value from the Scalar Reload Value Register (**TIMSRVR**) and sends out a triggering pulse (tick) to the 32-bit timers.

The 32-bit timers share the same decremter to reduce the Timer Unit's design gate count; hence, it requires four clock cycles to decrement all the four timers. Therefore, to prevent any interruption from the Prescaler while the timers are decrementing, the minimum Prescaler division factor is 5 (**SCALER_RELOAD_VALUE=4**). Refer to **Chapter 7** of the UT700 Functional Manual for more details.

Note: The minimum Prescaler division factor is 5 (**SCALER_RELOAD_VALUE=4**).

3.2 Timer Unit Configuration Register

The Configuration Register (**TIMTCR**) provides a Disable Timer Freeze (**DF**) bit to freeze the timer during debug. The remaining configuration bits in the **TIMTCR** are read only.

3.3 Timer Unit Four 32-bit Timers

Unlike the Prescaler, refer to **Section 3.1**, the Timers reload logic is programmable. The programmer needs to set the Restart (**RS**) bit in the Timer Control Register (**TIMCTR**) to enable automatic reloading when the timers underflow.

Each timer is also capable of generating an interrupt when the timer underflows if the Interrupt Enable (**IE**) bit is set.

Note: The timer interrupt numbers are 6 to 9 for timer 1 to timer 4, respectively.

3.3.1 Chaining of Timers

The Timer Unit provides a feature to chain the timers. This feature allows the chaining of two to four timers to increase the count value as shown in **Figure 1** to **Figure 3**.




Figure 1: Chain of Two Timers




Figure 2: Chain of Three Timers




Figure 3: Chain of Four Timers

Note: To chain the Timers, set the Chain (**CH**) bit in the succeeding timer **TIMCTR**.

3.3.2 Timer 4, Watchdog Timer

Timer 4 can function as a general purpose timer and as a watchdog timer. We configure Timer 4 as a watchdog timer by setting the **EN** bits in Timer 4 **TIMCTR** register and connecting the watchdog output signal (**WDOG**) to the system reset circuitry.

4.0 Timer Unit Initialization

The Timers can function as simple counters for time elapse calculation or as an asynchronous time expiration notification mechanisms. To initialize a timer as a simple counter, set the **TIMRVR** with a value (normally, 0xFFFF_FFFF) and set the following bits in the **TIMCTR** register:

- **LD**: load the value from **TIMRVR** to **TIMCVR** immediately
- **RS**: Reload the value from **TIMRVR** to **TIMCVR** when the timer underflows
- **EN**: Enable the timer

As an asynchronous time expiration notification mechanism, the initialization involves setting up interrupt sub-routine as shown in **Figure 4**. We only elaborate the Enable Peripheral Interrupt steps here. For the remaining initialization steps, refer to the **Enable the Interrupt Controller Module** application note from our website (www.cobham.com/HiRel).

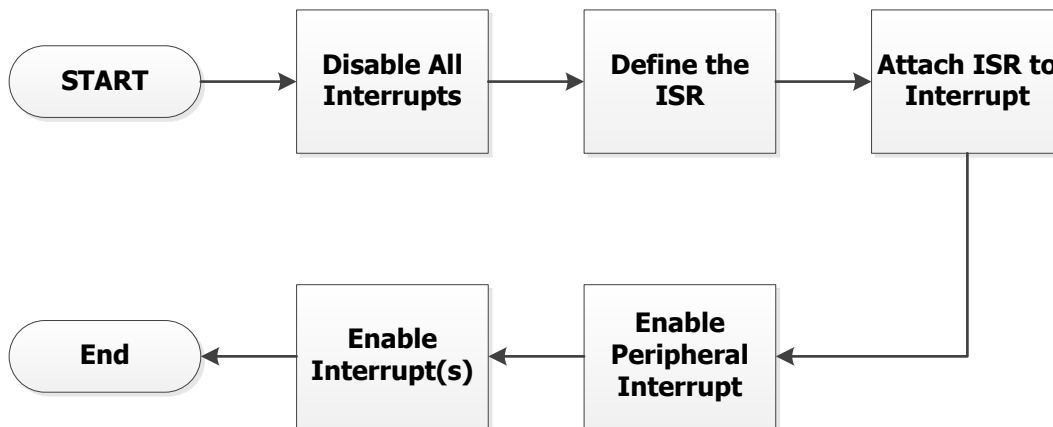


Figure 4: Timers Interrupt Initialization Steps

To enable the peripheral interrupt, set the **IE** bit in the **TIMCTR**. The other bit settings are similar to the settings of a simple counter.

5.0 Timer Unit Programming

We learned from [Section 4.0](#) that the Timer Unit has several features. We can chain the timers to increase the count value, generate asynchronous time expiration notification, as a simple counter for time elapse calculation, etc. We can also use timer 4 as a watchdog timer.

In the following sections, we provide programming examples to enable some of these features.

5.1 Timer Unit 12-bit Prescaler

The Timer Unit Prescaler has two registers, **TIMSVR** and **TMSRVR**. The following code example ([Code 1](#)) shows how to program the Prescaler.

```
TIMERUNIT.TIMSRVR.R = 0x04;    // set a value in the scale reload value register
TIMERUNIT.TIMSVR.R  = 0x04;    // set a value in the scale value register
```

Code 1: Setup Prescaler

Note: The minimum Prescaler division factor is 5 (SCALER_RELOAD_VALUE=4).

5.2 Timer Unit Configuration Register

The Timer Unit Configuration Register provides a **DF** bit to freeze the timers during debug, and this is how to program it ([Code 2](#)).

```
TIMERUNIT.TIMCR.B.DF = 0;    // Freeze Timer Unit during Debug
```

Code 2: Setup Configuration Register

5.3 Timer Unit 32-bit Timers

In this example, we program the timer to provide asynchronous time expiration notification ([Code 3](#) and [Code 4](#)). By clearing the **IE** bit, we program the timer as a simple counter.

Setting a value in the **TIMSVR** and **TIMSRVR** register:

See [Section 5.1, Code 1](#).

X = 0, 1, 2, and 3

```
TIMERUNIT.TIMER[X].TIMCVR.R = 0xFFFF;    // set a value in the TIMCVR
```

```
TIMERUNIT.TIMER[X].TIMRVR.R = 0xFFFF; // set a reload value in the TIMRVR
```

Code 3: Setup Timer Counter Value and Reload Counter Value Register

Setting the **TIMCTR** bits for operation:

X = 0, 1, 2, and 3

```
TIMERUNIT.TIMER[X].CTR.B.CH = 0; // set to chain preceding timer
TIMERUNIT.TIMER[X].CTR.B.IP = 0; // Interrupt pending
TIMERUNIT.TIMER[X].CTR.B.IE = 1; // Interrupt enable
TIMERUNIT.TIMER[X].CTR.B.LD = 1; // load the value in TIMRVR to TIMCVR
TIMERUNIT.TIMER[X].CTR.B.RS = 1; // restart counter with the value in TIMRVR
TIMERUNIT.TIMER[X].CTR.B.EN = 1; // enable the timer
```

Code 4: Setup Timer Control Register

5.4 Chaining of Timers

The following programming examples show how to chain the timers with interrupt enable, see **Figure 1** to **Figure 3** and **Code 5** to **Code 7** respectively.

Setting a value in the **TIMSVR** and **TIMSRVR** register:

See **Section 5.1, Code 1**.

Setting a value in the **TIMCVR** and **TIMRVR** register:

See **Section 5.3, Code 3**.

5.4.1 Chaining of Two Timers

Timer N: N = 1, 2, 3, and 4; X = 1, 2, and 3

```
TIMERUNIT.TIMER[X].CTR.B.CH = 1; // set to chain preceding timer
TIMERUNIT.TIMER[X].CTR.B.IP = 0; // Interrupt pending
TIMERUNIT.TIMER[X].CTR.B.IE = 1; // Interrupt enable
TIMERUNIT.TIMER[X].CTR.B.LD = 1; // load the value in TIMRVR to TIMCVR
TIMERUNIT.TIMER[X].CTR.B.RS = 1; // restart counter with the value in TIMRVR
TIMERUNIT.TIMER[X].CTR.B.EN = 1; // enable the timer
```

Timer N-1: X = 0, 1, and 2

```
TIMERUNIT.TIMER[X].CTR.B.CH = 0; // set to chain preceding timer
TIMERUNIT.TIMER[X].CTR.B.IP = 0; // Interrupt pending
TIMERUNIT.TIMER[X].CTR.B.IE = 1; // Interrupt enable
TIMERUNIT.TIMER[X].CTR.B.LD = 1; // load the value in TIMRVR to TIMCVR
TIMERUNIT.TIMER[X].CTR.B.RS = 1; // restart counter with the value in TIMRVR
TIMERUNIT.TIMER[X].CTR.B.EN = 1; // enable the timer
```

Code 5: Setup Chaining of Two Timers

Note: Pay attention to the Timers **CH** bit setting.

5.4.2 Chaining of Three Timers

Timer N: N = 3 and 4; X = 2 and 3

```
TIMERUNIT.TIMER[X].CTR.B.CH = 1; // set to chain preceding timer
TIMERUNIT.TIMER[X].CTR.B.IP = 0; // Interrupt pending
TIMERUNIT.TIMER[X].CTR.B.IE = 1; // Interrupt enable
TIMERUNIT.TIMER[X].CTR.B.LD = 1; // load the value in TIMRVR to TIMCVR
TIMERUNIT.TIMER[X].CTR.B.RS = 1; // restart counter with the value in TIMRVR
TIMERUNIT.TIMER[X].CTR.B.EN = 1; // enable the timer
```

Timer N-1: X = 1 and 2

```
TIMERUNIT.TIMER[X].CTR.B.CH = 1; // set to chain preceding timer
TIMERUNIT.TIMER[X].CTR.B.IP = 0; // Interrupt pending
TIMERUNIT.TIMER[X].CTR.B.IE = 1; // Interrupt enable
TIMERUNIT.TIMER[X].CTR.B.LD = 1; // load the value in TIMRVR to TIMCVR
TIMERUNIT.TIMER[X].CTR.B.RS = 1; // restart counter with the value in TIMRVR
TIMERUNIT.TIMER[X].CTR.B.EN = 1; // enable the timer
```

Timer N-2: X = 0 and 1

```
TIMERUNIT.TIMER[X].CTR.B.CH = 0; // set to chain preceding timer
TIMERUNIT.TIMER[X].CTR.B.IP = 0; // Interrupt pending
TIMERUNIT.TIMER[X].CTR.B.IE = 1; // Interrupt enable
TIMERUNIT.TIMER[X].CTR.B.LD = 1; // load the value in TIMRVR to TIMCVR
TIMERUNIT.TIMER[X].CTR.B.RS = 1; // restart counter with the value in TIMRVR
TIMERUNIT.TIMER[X].CTR.B.EN = 1; // enable the timer
```

Code 6: Setup Chaining of Three Timers

Note: Pay attention to the Timers **CH** bit setting.

5.4.3 Chaining of Four Timers

Timer N: N = 4; X = 3

```
TIMERUNIT.TIMER[X].CTR.B.CH = 1; // set to chain preceding timer
TIMERUNIT.TIMER[X].CTR.B.IP = 0; // Interrupt pending
TIMERUNIT.TIMER[X].CTR.B.IE = 1; // Interrupt enable
TIMERUNIT.TIMER[X].CTR.B.LD = 1; // load the value in TIMRVR to TIMCVR
TIMERUNIT.TIMER[X].CTR.B.RS = 1; // restart counter with the value in TIMRVR
TIMERUNIT.TIMER[X].CTR.B.EN = 1; // enable the timer
```

Timer N-1: X = 2

```
TIMERUNIT.TIMER[X].CTR.B.CH = 1; // set to chain preceding timer
TIMERUNIT.TIMER[X].CTR.B.IP = 0; // Interrupt pending
TIMERUNIT.TIMER[X].CTR.B.IE = 1; // Interrupt enable
TIMERUNIT.TIMER[X].CTR.B.LD = 1; // load the value in TIMRVR to TIMCVR
TIMERUNIT.TIMER[X].CTR.B.RS = 1; // restart counter with the value in TIMRVR
TIMERUNIT.TIMER[X].CTR.B.EN = 1; // enable the timer
```

Timer N-2: X = 1

```
TIMERUNIT.TIMER[X].CTR.B.CH = 1; // set to chain preceding timer
TIMERUNIT.TIMER[X].CTR.B.IP = 0; // Interrupt pending
TIMERUNIT.TIMER[X].CTR.B.IE = 1; // Interrupt enable
TIMERUNIT.TIMER[X].CTR.B.LD = 1; // load the value in TIMRVR to TIMCVR
TIMERUNIT.TIMER[X].CTR.B.RS = 1; // restart counter with the value in TIMRVR
TIMERUNIT.TIMER[X].CTR.B.EN = 1; // enable the timer
```

Timer N-3: X = 0

```
TIMERUNIT.TIMER[X].CTR.B.CH = 0; // set to chain preceding timer
TIMERUNIT.TIMER[X].CTR.B.IP = 0; // Interrupt pending
TIMERUNIT.TIMER[X].CTR.B.IE = 1; // Interrupt enable
TIMERUNIT.TIMER[X].CTR.B.LD = 1; // load the value in TIMRVR to TIMCVR
TIMERUNIT.TIMER[X].CTR.B.RS = 1; // restart counter with the value in TIMRVR
TIMERUNIT.TIMER[X].CTR.B.EN = 1; // enable the timer
```

Code 7: Setup Chaining of Four Timers

Note: Pay attention to the Timers **CH** bit setting.

5.5 Timer 4, Watchdog Timer

This programming example shows how to program the Timer 4 as a watchdog timer (**Code 8**).

Timer 4: X = 3

```
TIMERUNIT.TIMER[X].CTR.B.CH = 0; // set to chain preceding timer
TIMERUNIT.TIMER[X].CTR.B.IP = 0; // Interrupt pending
TIMERUNIT.TIMER[X].CTR.B.IE = 0; // Interrupt enable
TIMERUNIT.TIMER[X].CTR.B.LD = 1; // load the value in TIMRVR to TIMCVR
TIMERUNIT.TIMER[X].CTR.B.RS = 0; // restart counter with the value in TIMRVR
TIMERUNIT.TIMER[X].CTR.B.EN = 1; // enable the timer
```

Code 8: Setup the Watchdog

Note: The watchdog output signal (**WDOG**) is connected to the system reset circuitry.

5.5.1 Watchdog Timer, Kick the Dog

The system needs to reload the Timer 4 counter value periodically to prevent the watchdog from resetting the system (when Timer 4 underflows); this is how to reload Timer 4 counter value (**Code 9**):

Timer 4: X = 3

```
TIMERUNIT.TIMER[X].CTR.B.LD = 1; // load the value in TIMRVR to TIMCVR
```

Code 9: Kick the Dog

Note: Use **LD** bit to kick the dog.

6.0 Summary and Conclusion

After going through this AN, the reader should know how to enable the Timer Unit, how to setup the timers for the different modes of operation and how to chain the different timers.

For more information about our UT700 LEON 3FT/SPARC™ V8 Microprocessor and other products please visit our website, www.cobham.com/HiRel or email us at info-ams@cobham.com.

Appendix A: Header File

This header file is designed for this application note purpose only.

```

/*****\
* MODULE: Timer Unit (TIMERUNIT) *
\*****/

#include <stdint.h>

#define TIMERUNIT_BASEADDR 0x80000300

typedef volatile uint32_t vuint32_t;

struct TIMERUNIT_TAG { // Table 7.1: General Purpose Timer Unit Register
    union {
        vuint32_t R; // Scalar Value Register (TIMSVR) 0x80000300
        struct {
            vuint32_t RES31_12: 20; // Reserved
            vuint32_t SV: 12; // Scaler Value
        } B;
    } TIMSVR;
    union {
        vuint32_t R; // Scaler Reload Value (TIMSRVR) 0x80000304
        struct {
            vuint32_t RES31_12: 20; // Reserved
            vuint32_t SRV: 12; // Scaler Reload Value
        } B;
    } TIMSRVR;
    union {
        vuint32_t R; // Configuration Register (TIMCR) 0x80000308
        struct {
            vuint32_t RES31_10: 22; // Reserved
            vuint32_t DF: 1; // Disable Timer
            vuint32_t SI: 1; // Separate Interrupts
            vuint32_t IRQ: 5; // APB Interrupt
            vuint32_t TIMERS: 3; // Number of Timers
        } B;
    } TIMCR;

    struct TIMER_TAG TIMER[3];
};

struct TIMER_TAG { // Table 7.1: General Purpose Timer Unit Register
    union {
        vuint32_t R; // Timer Counter Value
        struct {
            vuint32_t TCV: 32; // Timer Counter Value
        } B;
    } TIMCVR;
    union {
        vuint32_t R; // Timer Counter Reload Value Register
        struct {

```

```
        vuint32_t TRV: 32;           // Timer Counter Reload Value
    } B;
} TIMRVR;
union {
    vuint32_t R;                   // Timer Control Register
    struct {
        vuint32_t RES31_7: 25;     // Reserved
        vuint32_t DH: 1;          // Debug Halt
        vuint32_t CH: 1;          // Chain with preceding timer
        vuint32_t IP: 1;          // Interrupt Pending
        vuint32_t IE: 1;          // Interrupt Enable
        vuint32_t LD: 1;          // Load Timer
        vuint32_t RS: 1;          // Restart
        vuint32_t EN: 1;          // Timer Enable
    } B;
} TIMCTR;

    vuint32_t Padding;
};

#define TIMERUNIT                (*(volatile struct TIMERUNIT_TAG*) TIMERUNIT_BASEADDR)
```

REVISION HISTORY

Date	Rev. #	Author	Change Description
03/20/2017	1.0.0	MTS	Initial Release
09/29/2017	1.0.1	MTS	Add note, page 1



Cobham Semiconductor Solutions

This product is controlled for export under the U.S. Department of Commerce (DoC). A license may be required prior to the export of this product from the United States.

Cobham Semiconductor Solutions
4350 Centennial Blvd
Colorado Springs, CO 80907

E: info-ams@aeroflex.com
T: 800 645 8862



Aeroflex Colorado Springs Inc., DBA Cobham Semiconductor Solutions, reserves the right to make changes to any products and services described herein at any time without notice. Consult Aeroflex or an authorized sales representative to verify that the information in this data sheet is current before using this product. Aeroflex does not assume any responsibility or liability arising out of the application or use of any product or service described herein, except as expressly agreed to in writing by Aeroflex; nor does the purchase, lease, or use of a product or service from Aeroflex convey a license under any patent rights, copyrights, trademark rights, or any other of the intellectual rights of Aeroflex or of third parties.